

# Low Intensity Heater Instruction Sheet

## AK-SR4 Air Intake Installation Sheet

For use with AG2 or AG1 Models.

### Parts List

- (1) Flexible Boot with Adapter and Worm Gear Clamp
- (1) 4" Inlet Duct
- (1) Mounting Bracket, Lag Bolt and Washer
- (1) 5" Duct Bolt, Nut, Lock Washer and (2) Washers
- (1) Inlet Cap
- (4) #8 TEK Self Drilling Screws

Figure 1 • Exploded View of Air Intake Kit

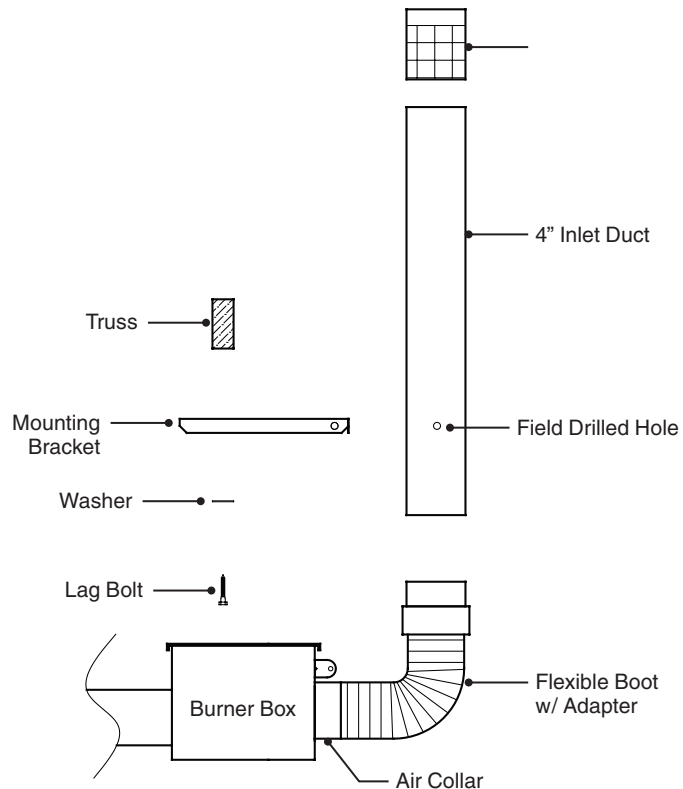


Figure 2 • Assembly View of Air Intake Kit


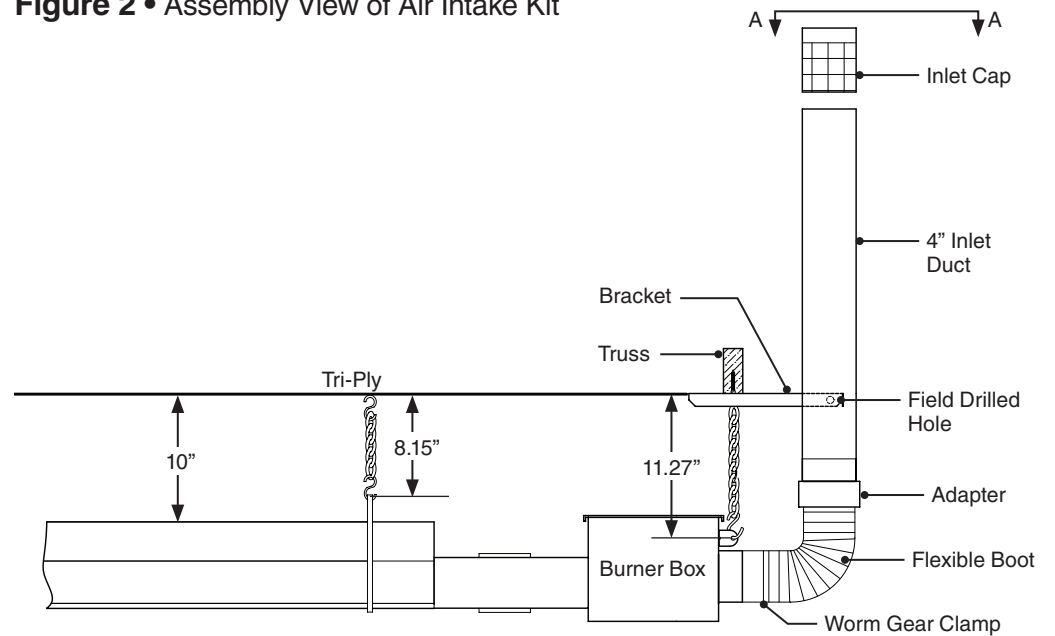


Figure 3 • View 'A-A'

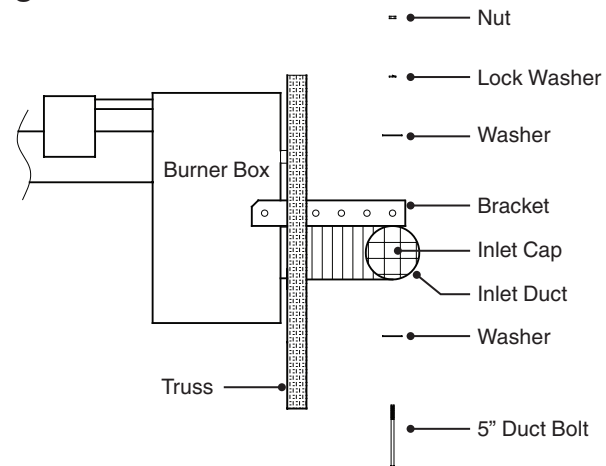

# Low Intensity Heater Instruction Sheet

## AK-SR4 Air Intake Installation Sheet

For use with AVD or AVS Models.

### Parts List

- (1) Flexible Boot with Adapter and Worm Gear Clamp
- (1) 4" Inlet Duct
- (1) Mounting Bracket, Lag Bolt and Washer (Not used on AV Series)
- (1) 5" Duct Bolt, Nut, Lock Washer and (2) Washers (Not used on AV Series)
- (1) Inlet Cap
- (4) #8 TEK Self Drilling Screws

Figure 1 • Exploded View of Air Intake Kit

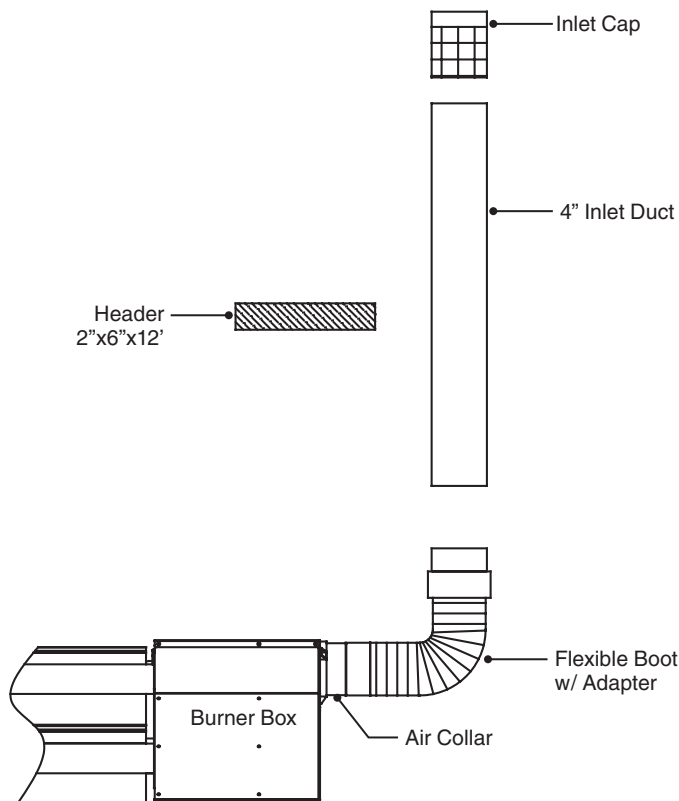


Figure 2 • Assembly View of Air Intake Kit

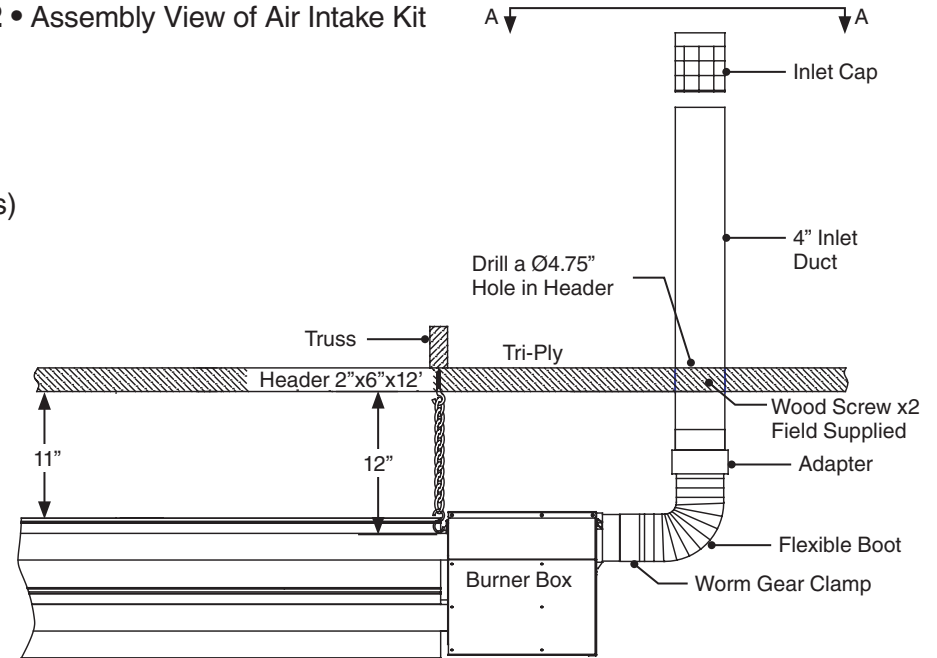


Figure 3 • View 'A-A'

