

Step 1: Center the 30-0570 latch between the two (2) rivets on the long side of the inlet frame, while pushing up from the tab as shown in *Figure 1*.



Figure 1 Center between Rivets and Push up on Tab

Step 2: Press the latch base against the inlet frame as shown. Mark the location of the top hole or start the screw into the panel. (See *Figure 2*.)

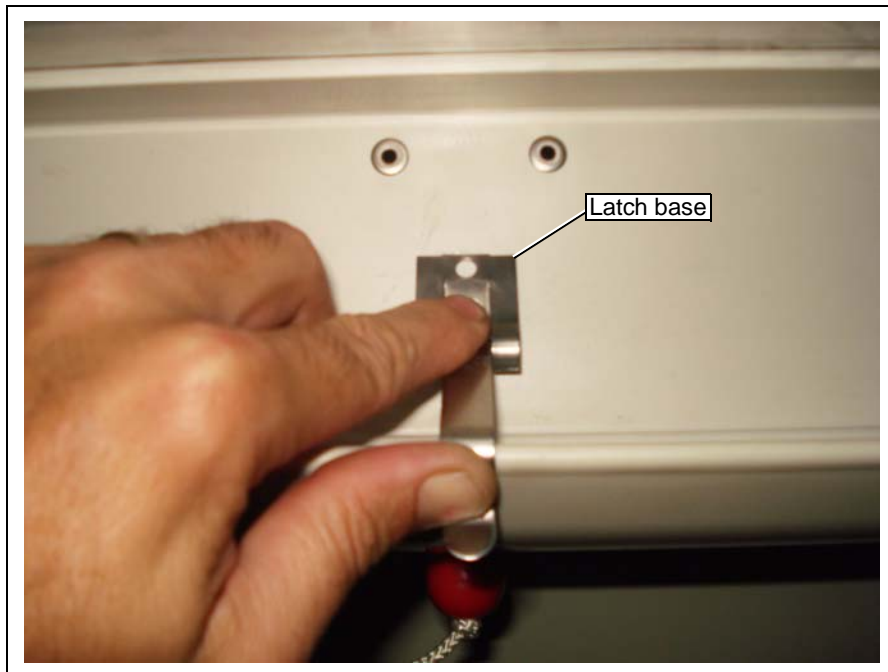


Figure 2 Push in on Latch Base



Instruction Sheet for AP-4000P Latch

Step 3: Finish driving the top screw into the panel ensuring the latch remains vertical. The screw will pull the base down to the panel. *(See Figure 3.)*



Figure 3 *Screw Latch Base to Panel*

Step 4: Ensure the latch is in the correct location to hold door firmly closed and finish by installing the lower screw. *(See Figure 4.)*

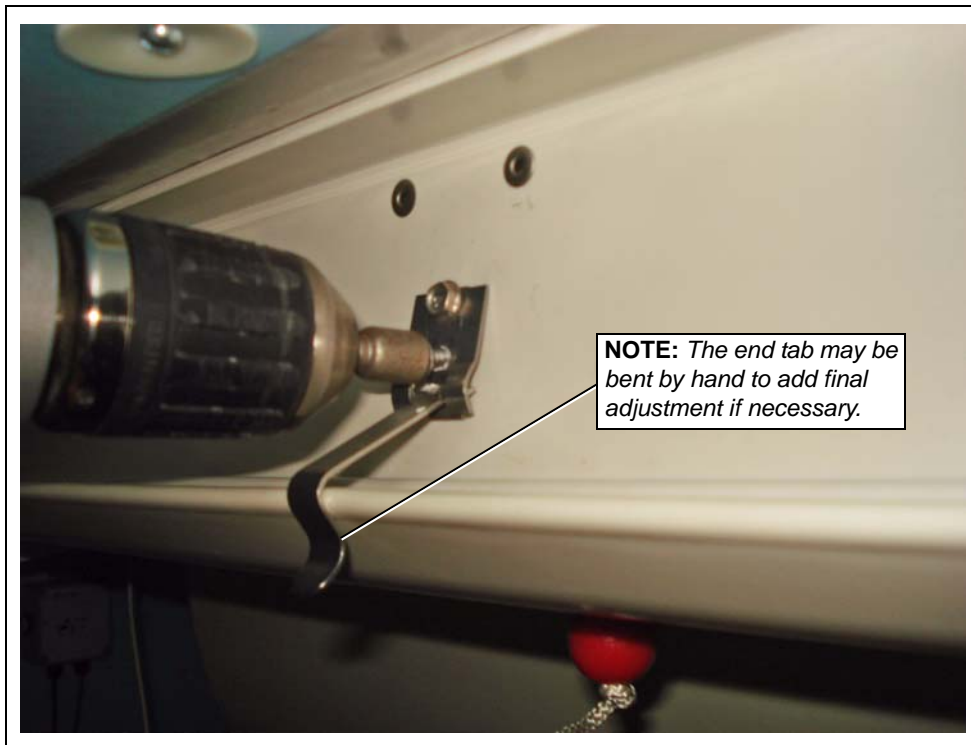


Figure 4 *Install Lower Screw*